Item #



Job ___

POLYMER UTILITY CART: myCart Series[™]

- **User-Friendly:** Ergonomic handle and additional legroom puts more distance between the shelves and you. You can push the cart more freely without hitting your shins and feet against the cart.
- **Convenient:** The utility tray is roomy enough to store every day objects. It offers 2x the amount of space than traditional utility carts; which allows for objects to fit in comfortably.
- **Personalized:** Each cart comes with two labels for easy identification.
- Ultimate Cleanability: Smooth polymer shelf surfaces with contoured edges are designed to resist staining and wipe clean easily.
- Corrosion-Proof Shelves: All-polymer shelves will never corrode.
- **Sturdy Construction:** Impact resistant shelves are designed to withstand daily abuse.

Weight capacities evenly distributed:

- MY1627 and MY2030 models: 150lbs. (68kg) per shelf, not to exceed 300lb (136kg) on a 2-shelf cart and 400 lb. (181kg) on a 3-shelf cart.
- MY2636 Models: 200lbs. (90kg) per shelf, not to exceed 400 lb. (181kg) on a 2-shelf cart and 500 lbs. (227kg) on a 3-shelf cart.
- **Contains Spills:** ⁷/₁₆" (11mm) ship's edge retains small spills and prevents items from sliding off during transport.
- Specific Models with Microban[®] product protection: The blue MyCart has built in Microban product protection. This inhibits the growth of bacteria, mold, mildew, and fungi that cause odors, stains, and product degradation.
- Attractive Aesthetics allow for use in a variety of applications.
- 2-tier and 3-tier models available
- Easy-to-Adjust: Optional center shelf adjusts on 1" (25mm) increments.
- Easy, No-Tool Assembly: Ships knocked down.
- myCart Series[™] is NSF listed (NSF







*Microban[®] antimicrobial protection inhibits the growth of stain and odor-causing bacteria on Starsys, keeping the surface areas "cleaner between cleanings."



InterMetro Industries Corporation North Washington Street Wilkes-Barre, PA 18705 www.metro.com





Short Form Specs — Base Models:

- Cart, Utility, consisting of at least 2 high-density polyethylene, injection-molded shelves and 4 chrome-plated posts. Handle shelf will have an integrated utility tray with a base width of 1.8-2.2" (46-56mm) and coved corners. Flat shelf will have a built in 3" (76mm) cutaway. All shelves will have a built-in ⁷/₁₆" (11mm) deep ship's edge around the perimeter. 2-shelf cart design is such that user may add an intermediate shelf if deemed necessary that adjusts on 1" (25mm) increments. Cart will include two nominal 4.625" L x .88" H (117.475 x 22.352mm) labels for easy identification.
- 1627 and 2030 models: Roll on four 4" (102mm) diameter thermoplastic, mark-resistant swivel/stem casters.
- 2636 models: Roll on four 5" (127mm) diameter thermoplastic, mark-resistant swivel/stem casters.

Construction:

- Continuous Usage Temperature: -20/120°F (-29/49°C)
- Carts are not intended for cart wash applications
- Casters

4" (102mm) swivel caster: Thermoplastic, non-marking gray tread. Plated horn and axle. Replacement part: RPBC4M-4, bag of four.

5" (127mm) swivel caster: Resilient rubber material, plated horn and axle.

Replacement part: 5M, sold individually.

Configurations:

- 2-tier and 3-tier models
- MY1627 and MY2030 Base Model Specs: Chrome posts, 4" (102mm) non-marking swivel casters.
- MY2636 Base Model Specs: Chrome posts, 5" (127mm) swivel resilient rubber casters


Model No.	Model No. Black	Model No. Blue with Antimicrobial		Length/Height the Handle	Description	Posts	Load Rating per Cart	Pkd	orox. I. Wt.
Gray MY1627-24G	MY1627-24BL	MY1627-24BU	18 ⁵ / ₁₆ x31 ¹ / ₂ x35 ¹ / ₂	(mm) 465.2x800.1x901.7	2-shelf base model	chrome-plated	(lbs.) (kg) 300 136		(kg) 12.93
MY1627-34G	MY1627-34BL	MY1627-34BU	18 ⁵ /16x31 ¹ /2x35 ¹ /2	465.2x800.1x901.7	3-shelf base model	chrome-plated	400 181	34	15.42
MY2030-24G	MY2030-24BL	MY2030-24BU	23 ⁷ /16X34 ³ /8X35 ¹ /2	595.3x873.3x901.7	2-shelf base model	chrome-plated	300 136	33	14.97
MY2030-34G	MY2030-34BL	MY2030-34BU	23 ⁷ /16x34 ³ /8x35 ¹ /2	595.3x873.3x901.7	3-shelf base model	chrome-plated	400 181	41.5	18.82
MY2636-25G	MY2636-25BL	MY2636-25BU	27 ¹¹ / ₁₆ x40 ¹ / ₄ x36 ⁷ / ₈	703.3x1022.4x936.6	2-shelf base model	chrome-plated	400 181	40	18.14
MY2636-35G	MY2636-35BL	MY2636-35BU	27 ¹¹ / ₁₆ x40 ¹ / ₄ x36 ⁷ / ₈	703.3x1022.4x936.6	3-shelf base model	chrome-plated	500 227	51	23.13

New! Purple myCart:

Actual Width/Length/Height				Load Rating		App	Approx.	
Model No. Including the Handle					per (Cart	Pkd	. Wt.
Purple	(in.)	(mm)	Description	Posts	(lbs.)	(kg)	(lbs.)	(kg)
MY2030-24AP	23 ⁷ /16x34 ³ /8x35 ¹ /2	595.3x873.3x901.7	2-shelf base model	chrome-plated	300	136	33	14.9
MY2030-34AP	23 ⁷ / ₁₆ x34 ³ / ₈ x35 ¹ / ₂	595.3x873.3x901.7	3-shelf base model	chrome-plated	400	181	41.5	18.8




Dimensions:

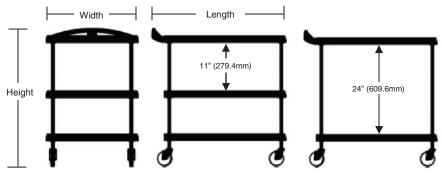


MY1627

- Easy-grip handle and utility tray
- Small footprint for tight spaces
- Accommodates Metro tote boxes and ISO totes

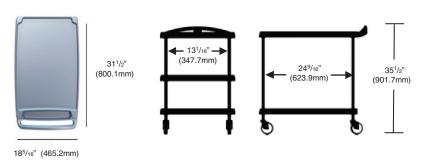

MY2030


- Cart handle has built-in recessed support channels to manage odd shaped items
- Sized for standard racks
- (1) Glass/dish rack
- (2) milk crates
- (2) bus box [on top shelf
- (1) bus box + (1) silverware tote [on mid/bottom shelf]

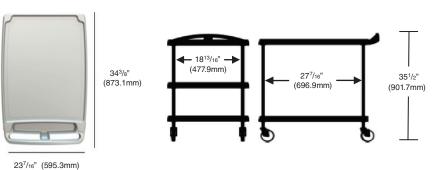

MY2636

- Top shelf can accommodate:
 (2) nominal 18 x 26"
 (457 x 660mm) polycarbonate totes side by side
 (2) Metro totes measuring 17¹/₂ x 22¹/₂"
 (445 x 571mm) side by side
- Cart handle has built in slot to hold scanners



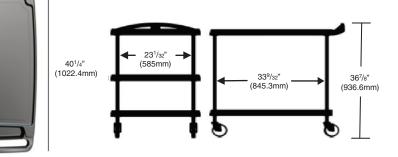

27¹¹/₁₆" (703.3mm)

Ð

POLYMER UTILITY CART: myCart Series[™]



Accessories:







Specifications: Bin — ABS Thermoplastic Wastebasket — Polyethylene

			Width/Heig	ht/Depth	Pkd	. Wt.
Model No.	Description	Fits Cart	(in.)	(mm)	(lbs.)	(kg)
MYWB1	Wastebasket (including holder)	MY1627	17 ⁷ / ₈ x 16 ¹ / ₄ x 14 ³ / ₄	454 x 413 x 375	5.7	2.5
MYWB2	Wastebasket (including holder)	MY2030	23 x 16 ¹ / ₄ x 14 ³ / ₄	584 x 413 x 375	5.8	2.6
MF222	Wastebasket Only	MY1627, MY230	14 ³ /8 x 15 ³ /8 x 10 ³ /8	365 x 391 x 264	2.8	1.3
MYUB1	Utility Bin (including holder)	MY1627	17 ⁷ /8 x 7 x 15 ¹ /4	454 x 178 x 387	5	2.2
MYUB2	Utility Bin (including holder)	MY2030	23 x 7 x 15 ¹ / ₄	584 x 178 x 387	5.1	2.3
UB1	Utility Bin Only	MY1627, MY230	16³/ଃ x 6 x 11	416 x 152 x 279	2	0.9

Personalization Label

Constructed of polyester material with a clear polyester flap to protect written information from wiping off.

4.625 in.						
This is myCart get your own.						

		Len	gth/Height
Model No.	Description	(in.)	(mm)
MYCARTLBL-10PK	Pack of 10 Personalized Labels	4³/₅ x ⁷ /8	117.5 x 22.4

.88 in.

All Metro Catalog Sheets are available on our website: www.metro.com



InterMetro Industries Corporation

North Washington Street, Wilkes-Barre, PA 18705 Phone: 570-825-2741 Product Information. U.S. and Canada: 1.800.992.1776 Outside U.S. and Canada: www.metro.com/contactus Printed in U.S.A Rev. 4/15

Annroy

Information and specifications are subject to change without notice. Please confirm at time of order

Copyright © 2015 InterMetro Industries Corp.